

qtserial / Support qtserial

bspqtserial,

, BSPbuild/conf/local.conf:

```
IMAGE_INSTALL_append = " qtserialport "
```

phytec-qt5demo-imagesdk.